



## Cleaning Instructions for the 1 oz. Gallon Bottle Pump

1. Remove pump and wash sealant off of the pump.
2. Unscrew the head of the pump body.
3. Remove inner spring and clean sealant and fiber from the spring and barrel.
4. Carefully remove the head from the piston assembly, being careful not to lose the small check ball in the head of the assembly.
5. Remove the check ball from the head assembly.
6. Wash the head out with water until water comes out of the spout. Rinse the piston assembly out with water.
7. Carefully reinsert the check ball into the piston assembly and reattach the head to the piston assembly.
8. Insert the piston assembly into the barrel.
9. Thread the collar on and hand tighten.

